

⚠️ WARNING ⚠️

Hunting from an elevated position is dangerous and risky.

Do not attempt to climb off the ground without understanding the safety risks.

Failure to follow and understand all directions and watch all instructional videos could result in injury or death.

⚠️ WARNING ⚠️

The VersaLink can be used to replace cam buckles and ratchet straps for certain applications. They were designed for climbing sticks, but can be used in a variety of scenarios. Never use a VersaLink in a life support scenario like a Tether or Lineman Belt. Always inspect your VersaLinks before use. DO NOT use if excessive wear, fraying, or tearing is present. If any of these conditions exist, destroy the VersaLink immediately.

To install the VersaLink on your climbing stick:

1. Hold your climbing stick against the tree at the appropriate height.
2. Wrap the VersaLink around the tree and slip the appropriate link over the versabutton.
3. You should now have two links over the versabutton.
4. Pull down on your climbing stick to remove all slack from the VersaLink and set the stick tight to the tree trunk.

VersaLinks rated at 400 lbs.

DO NOT use Tethrd products without reading all safety warnings and directions.

DO NOT use Tethrd products until you have watched ALL directional videos and warnings at www.YouTube.com/TethrdNation or www.TethrdNation.com

DO NOT use Tethrd products until you have practiced on the ground with all your equipment and are 100% confident with the system.

DO NOT use Tethrd products until you have practiced in the dark to prepare for a hunting scenario.

DO NOT ascend or descend a tree in the dark without a hands free light (like a head lamp). You need both hands free to safely climb.

DO NOT use Tethrd products without first inspecting them for damage or excessive wear.

DO NOT use any safety products (ropes, carabiners, etc.) that are not climbing rated.

DO NOT ascend or descend a tree with climbing methods that are untested or unrated.

DO NOT ascend or descend a tree without being connected to the trunk at all times.

PRACTICE

Practice using your saddle and platform in a safe environment and no more than six inches off the ground. You must practice at least five times in the daylight and at least two times in the dark before using it in a hunting scenario. Under no circumstances should you use a saddle or platform without practicing your system in a safe environment. Practicing will ensure you understand the safe guards of your system, as well as the most efficient way to employ your saddle and platform.

WARRANTY

We warrant for one year from purchase date and only to the original retail buyer (Buyer) that our products (Products) are free from defects in material and workmanship. If Buyer discovers a covered defect, Buyer should deliver the Product to us at the address set forth in this pamphlet. We will replace such Product free of charge. That is the extent of our liability under this Warranty and, upon the expiration of the applicable warranty period, all such liability shall terminate.

WARRANTY EXCLUSIONS: We do not warrant Products against normal wear and tear, unauthorized modifications or alterations, improper use, improper maintenance, accident, misuse, negligence, damage, or if the Product is used for a purpose for which it was not designed. This Warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Except as expressly stated in this Warranty, we shall not be liable for direct, indirect, incidental, or other types of damages arising out of, or resulting from the use of the Product. This Warranty is in lieu of all other warranties, express or implied, including, but not limited to, implied warranties of merchantability or fitness for a particular purpose (some states do not allow the exclusion or limitation of incidental or consequential damages or allow limitations on the duration of an implied warranty, so the above exclusions may not apply to you).

Made in China